

過載(OverLoad)

型號 TYPE	電流調整範圍	適用之電 磁接觸器	固定 形式	接點 型態 1a 1b
TD1.8	1.8~2.6A	PC, PD	*	2 2
TD5.5	5.5~8A			0 1
TD2.6	2.6~3.3A			1 1
TR0.28	0.28~0.42A	PC, PD, PE, PF, PG, PJ, PK, DLS	軌道	2 2
TR1	1~1.54A			1 3
TR0.2	0.2~0.34A			0 4
TR0.4	0.4~0.54A			3 1
TR0.8	0.8~1.2A			1 1
TF29	29~41A	PF	#	2 0
TF39	39~50A			0 2
TMP92-160	92~160A	PC, PD, PE, PF, PG, PJ, PK, DLS	螺絲	1 0

*****:直接固定於電磁接觸器之後面

#:加裝 ET-13 後可使用於(PC, PD, PE, PF, PG, PJ, PK, DLS)等之接觸器,並可使用軌道安裝."TJE"及"TMP"為附貫穿式 CT TYPE

TM25	25~35A			
TM14.5	14.5~25A			
TM3.6	3.6~6A			
TM35-50	35~50A			
TM5.7	5.7~9.5A			
MR0.21	0.21~0.34A			
MR-11	92~160A			
MR5.4	92~160A			
MR3.6	92~160A			
MR0.45	92~160A			